

Feed Water

B

Concentrated Brine


Sea Water RO Elements T M 8 0 0 C

Туре	Diameter Inch	Membrane Area ft²(m²)	Salt Rejection %	Product Flow Rate gpd(m ³ / d)	Feed Spacer Thickness mil
TM820C-370	8"	370(34)	99.75	6,000(22.7)	31
TM820C-400	8"	400(37)	99.75	6,500(24.6)	28

1. Membrane Type		Cross Linked Fully Aromatic Polyamide Composite
2. Test Conditions		
	Feed Water Pressure	800 psi(5.52MPa)
	Feed Water Temperature	77° F(25°C)
	Feed Water Concentration	32,000 mg/l Nacl
	Recovery Rate	8%
	Feed Water pH	8
3. Minimum Salt Rejection		99.5%
4. Minimum Product Flow Rate		4,800gpd(18.2m ³ /d)(TM820C-370)
		5,200gpd(19.7m ³ /d)(TM820C-400)
5. Boron Rejection		93% at pH 8 (5mg/l Boron added to Feed water)
(typical value)		

Dimensions

All dimensions shown in Inches (millimeter).

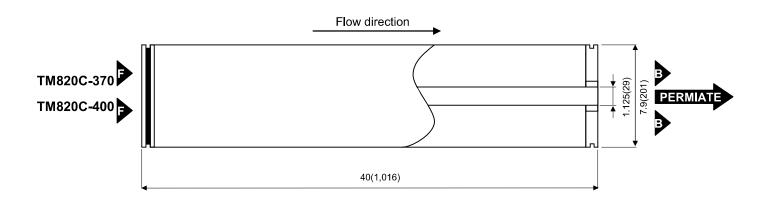

Operating Limits

Maximum Operating Pressure Maximum Feed Water Temperature Maximum Feed Water SDI15	113 [°] F (45 °C) 5
Feed Water Chlorine Concentration ———— Feed Water pH Range, Continuous Operation ———	
Feed Water pH Range, Chemical Cleaning Maximum Pressure Drop per Element Maximum Pressure Drop per Vessel	20 psi (0.14 MPa)

Operating Information

- 1. For the recommended design range, please consult the latest Toray technical bulletin, design guidelines, computer design program, and/ or call an application specialist. If the operating limits given in this Product Information Bulletin are not strictly followed, the Limited Warranty will be null and void.
- All elements are wet tested, treated with tested feed water solution, and then vacuum packed in oxygen barrier bags with deoxidant inside. To prevent biological growth during system shutdown, it is recommended to perform 30-60 minutes flushing of Toray elements with seawater once in every two days.
- 3. Permeate from the first hour of operation shall be discarded.
- 4. The customer is fully responsible for the effects of chemicals that are incompatible with the elements. Their use will void the element Limited Warranty.

Notice

- Toray accepts no responsibility for results obtained by the application of this information or the safety or suitability of Toray's products, either alone or in combination with other products. Users are advised to make their own tests to determine the safety and suitability of each product combination for their own purposes.
- 2. All data may change without prior notice, due to technical modifications or production changes.



9450 SW Gemini Dr, ECM #83358, Beaverton, OR 97008 Tel 855-896-3525 | Fax 866-409-9622 www.neologicsolutions.com email: info@neologicsolutions.com STUART, FL | BEAVERTON, OR | GREENVILLE, SC | SAN DIEGO, CA

© Copyright 2014 NeoLogic Solutions. All Rights Reserved. Manufacturer reserves the right to make changes without notice.